METRO Model No. 174561

INSTRUCTIONS

FEATURES:

- New clamshell type case protects clock during travel
- Compact design goes anywhere
- Clock automatically "pops" up when clamshell case is opened
- Unique "touch" top snoozer and light feature
- Quartz accuracy to within 1 second per day
- Large .5" L.C.D. display
- Snoozer repeats alarm every 4 minutes
- Back-lit display for easy nighttime viewing
- Easy-to-set front controls
- PM and "Alarm-On" Indicators

Congratulations! You are now the proud owner of a SPARTUS L.C.D. Quartz Travel Alarm. It represents the latest in modern timekeeping technology. The 100% solid state quartz circuitry has no moving parts and is completely silent.

Your SPARTUS clock has a durable clamshell type case that completely encloses and protects your clock during travel. When you open the case, the clock will automatically "POP-UP" into an upright position. The top portion of the clamshell cover should be positioned so that it rests on the upper edge of the clock (as illustrated) in order for the SNOOZER and LIGHT to function properly. When traveling, simply lift the top cover up, fold the clock back down into the case and close the clamshell until it "snaps" closed.

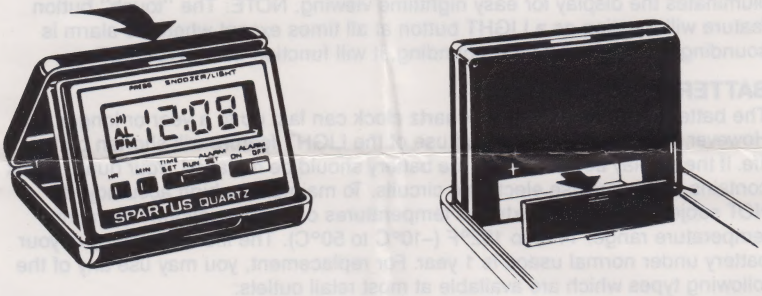

BATTERY INSTALLATION

This clock requires a 1.5 volt "AAA" alkaline battery (not included). The battery compartment is located on the backside of the clock body. With your thumb or finger, slide the battery door downward (as illustrated) in order to remove it. Insert one "AAA" alkaline battery according to the symbols on the back of the clock case. NOTE: When looking at the back of the clock case, the positive (+) side of the battery will be on the left. Replace the battery door and slide it back into position until it "clicks" shut.

TO SET THE TIME

1. Slide the SET switch ① to TIME SET position.
2. Depress the HOUR ② button as many times as necessary until the correct hour is reached. Note the PM Indicator ③ on the display.
3. Depress the MIN button ④ as many times as necessary until the correct minute is reached.
4. Slide the SET switch back to the RUN position.

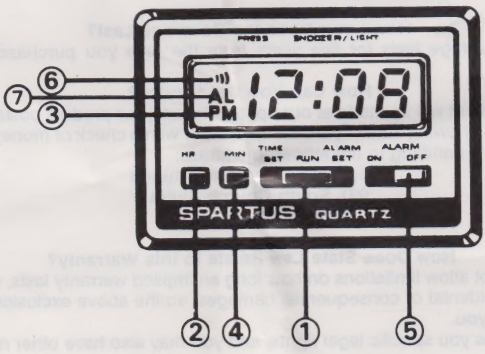

TO SET THE ALARM

1. Slide the SET switch to ALARM SET position. The "AL" indicator ⑦ will light up.
2. Depress the HOUR button as many times as necessary until the desired hour is reached. Again, note the PM indicator on the display.
3. Depress the MIN button as many times as necessary until the desired minute is reached
4. Slide the SET switch back to the RUN position.

TO USE THE ALARM

Slide the ALARM switch ⑤ to the ON position. The ALARM ON indicator ⑥ will appear in the upper left corner of the display. This indicates the alarm is ON and will sound at the preset time.

TO STOP THE ALARM

When the alarm sounds, slide the ALARM switch to the OFF position. If you do not turn the alarm off, it will sound for one {1} minute and turn itself off automatically. Also, it wil sound again at the same time the following day.

TO USE THE SNOOZER FEATURE

Your SPARTUS clock has a unique "touch" SNOOZER. When the clock is in the upright position, the top half of the clamshell case acts as a SNOOZER button. When the alarm sounds, simply press the top of the case firmly. The alarm will stop and will sound again in approximately 4 minutes. This convenient "touch" SNOOZER is easy to use in the dark and eliminates fumbling for buttons.

TO USE THE DISPLAY LIGHT

This clock has a built-in display light to illuminate the display when needed. Like the SNOOZER, the LIGHT is also a "touch" feature.

When you press the top of the clamshell case, the display light comes on and illuminates the display for easy nighttime viewing. NOTE: The "touch" button feature will function as a LIGHT button at all times except when the alarm is sounding. When the alarm is sounding, it will function as a SNOOZER.

BATTERY REPLACEMENT

The battery which powers your quartz clock can last up to a year or longer. However, continued or prolonged use of the LIGHT feature will shorten battery life. If the display begins to dim, the battery should be replaced. Your quartz clock contains highly precise electronic circuits. To maintain its high accuracy, do NOT subject it to shock, extreme temperatures or direct sunlight. Operating temperature range: 14°F to 122°F (–10°C to 50°C). The life expectancy of your battery under normal usage is 1 year. For replacement, you may use any of the following types which are available at most retail outlets:

Eveready E92 Mallory MN2400
Ray-O-Vac 824 Varta 7239

FIVE YEAR LIMITED WARRANTY

What is Covered?

This warranty covers all defects in workmanship and materials in your Spartus product under normal use and service.

What is not Covered?

Defects caused by tampering, abuse, improper use, or unauthorized alterations or repairs are not covered by this warranty.

Batteries, shipping costs to our authorized service location, and handling costs are not covered.

We will not be responsible for implied warranties, including those of fitness for a particular purpose and merchantability after the initial five-year period.

We will not pay for loss of time, inconvenience, loss of use of the product, or property damage caused by this product or its failure to work, or any other incidental or consequential damages.

How Long Does the Coverage Last?

This warranty coverage lasts for five years from the date you purchased your Spartus product.

How Can You Get Service?

Repair or replacement will be made at our option. Return your product postage prepaid with proof of purchase (showing date of purchase) together with a check or money order for $5.00 to cover the cost of handling to the following address:

Spartus Home Furnishings
921 South Church Avenue
Louisville, MS 39339

How Does State Law Relate to this Warranty?

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.